



HOW TO USE

- ➡ Using a hard rubber press the grout firmly into the joints ensuring that the joints are completely filled.
- ➡ Clean off the surplus grout from the joint and surface within 10-20 minutes.
- ➡ Do not allow water to flow and run into ungrouted joints.

COVERAGE

- ➡ Depends on the size of the tiles, stone & width of joint.

WARNING

- ➡ Wear Protective Gloves & Goggles.
- ➡ Use a Suitable Dust Mask.



C2 212 TILE ADHESIVE GRAY

20 KG

S1 252 TILE STONE ADHESIVE GRAY



20 KG



S2 335 HEAVY STONE ADHESIVE GRAY & WHITE

20 KG



1 LTR.

5 LTR.

10 LTR.

WHITE SBR WATER PROOFING SYSTEM



1 KG & 5 KG

SUPER EPOXY GROUT



1 KG

DUW FIX JOINT FILLER



5 KG



10 KG



1 KG



4 KG

APPLICATION

- ➡ Ceramic Floor
- ➡ Wall Tiles
- ➡ Quarry Tiles
- ➡ Stone
- ➡ Marble
- ➡ Mosaics

BENEFITS

- ➡ Weather Proof
- ➡ Easy Maintenance
- ➡ Non Shrinking
- ➡ High Strength
- ➡ Anti Fungal and Anti Bacterial
- ➡ 100% Stain Free and Waterproof
- ➡ Hygienic and Hard Wearing
- ➡ Crack Resistant

Mfg. & Mkt. by:

Duw Fix Chemicals

Blok No. 233, Dev Kempas, New Ring Road, Cancel Road, Kosmada, Kamrej, Surat - 395006. Gujarat (India).

Cell : 9499502775 / 9499502776

E-mail : duwfix@gmail.com Web : www.duwfix.com



Duw Fix
Build Green World

SUPER EPOXY GROUT

THREE PART



REGULAR SERIES

101 White	114 Baff
102 Quarry Red	115 Platinum
103 Silver	116 Light Green
104 Dusty Rose	117 Alpine Blue
105 Coffee Brown	118 Burgundy
106 Olive Grenn	119 Parchment
107 Tarra Cotta	120 Dark Grey
108 Sandtone	121 Imca Gold
109 Black	122 Mocha
110 Sky Blue	123 Cadmium Red
111 Raven	124 Smoke Grey
112 Ivory	125 Sable
113 Canyon Red	126 Natural Grey



SILVER SERIES

101 White	114 Baff
102 Quarry Red	115 Platinum
103 Silver	116 Light Green
104 Dusty Rose	117 Alpine Blue
105 Coffee Brown	118 Burgundy
106 Olive Grenn	119 Parchment
107 Tarra Cotta	120 Dark Grey
108 Sandtone	121 Imca Gold
109 Black	122 Mocha
110 Sky Blue	123 Cadmium Red
111 Raven	124 Smoke Grey
112 Ivory	125 Sable
113 Canyon Red	126 Natural Grey



GOLDEN SERIES

101 White	114 Baff
102 Quarry Red	115 Platinum
103 Silver	116 Light Green
104 Dusty Rose	117 Alpine Blue
105 Coffee Brown	118 Burgundy
106 Olive Grenn	119 Parchment
107 Tarra Cotta	120 Dark Grey
108 Sandtone	121 Imca Gold
109 Black	122 Mocha
110 Sky Blue	123 Cadmium Red
111 Raven	124 Smoke Grey
112 Ivory	125 Sable
113 Canyon Red	126 Natural Grey




RAINBOW SERIES

101 White	114 Baff
102 Quarry Red	115 Platinum
103 Silver	116 Light Green
104 Dusty Rose	117 Alpine Blue
105 Coffee Brown	118 Burgundy
106 Olive Grenn	119 Parchment
107 Tarra Cotta	120 Dark Grey
108 Sandtone	121 Imca Gold
109 Black	122 Mocha
110 Sky Blue	123 Cadmium Red
111 Raven	124 Smoke Grey
112 Ivory	125 Sable
113 Canyon Red	126 Natural Grey

HOW TO USE / इस्तेमाल करने का तरीका




Mix hardener & Resin properly. हार्डनर और रेजिन को अच्छी तरह मिश्रण करो।

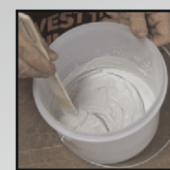

Add Filler Properly During Mixing, Until Homogeneous Plaster is Obtained. एक समान पेस्ट बनने तक, मिश्रण में धीरे-धीरे फिलर को मिलाए।



Fill the Joint with the Help of Squeeze trowel. रबर की थापी से जॉइंट को भरो।

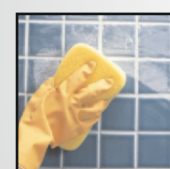

Clean the Tiles with the help of Sponge after 10-20 minutes. 10-20 मिनट के बाद टाइल्स को स्पंज की मदद से साफ करें।

